




// MAMPARA DE BAÑO // PAROIS DE DOUCHE // SHOWER ENCLOSURE //
// CABINA DOCCIA // DUSCHABTRENNUNG // RESGUARDO DE DUCHE //


FURO P21

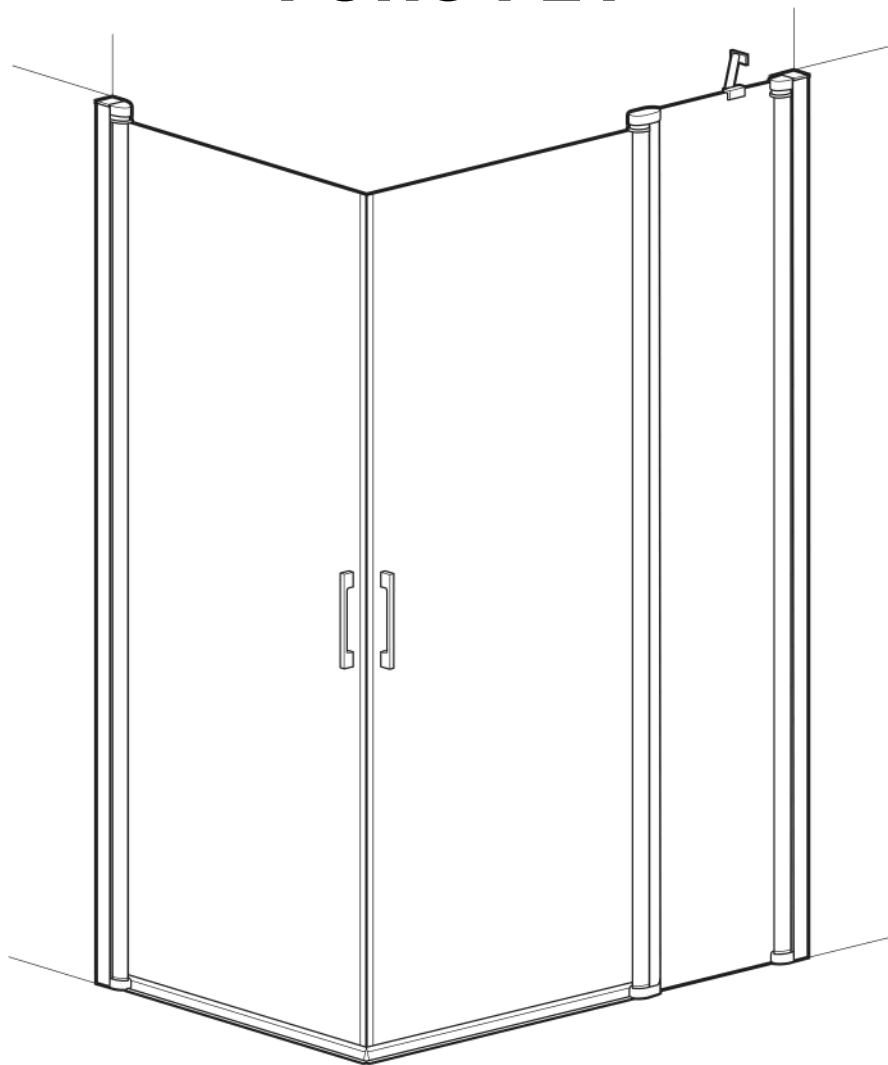


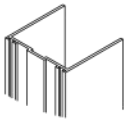



M-01  **2**

M-03  **1**

M-05  **2**

M-07  **2**


M-09  **2**


M-11  **1**

M-13  $\phi 6$ **8**

M-15  **3,5x16** **6**

M-02  **1**

M-04  **1**


M-06  **2**



M-10  **2**


M-12  **DIN 7981 4,2x32** **6**





M-14  **DIN 7982 4,2x32** **2**


M-16  **6**







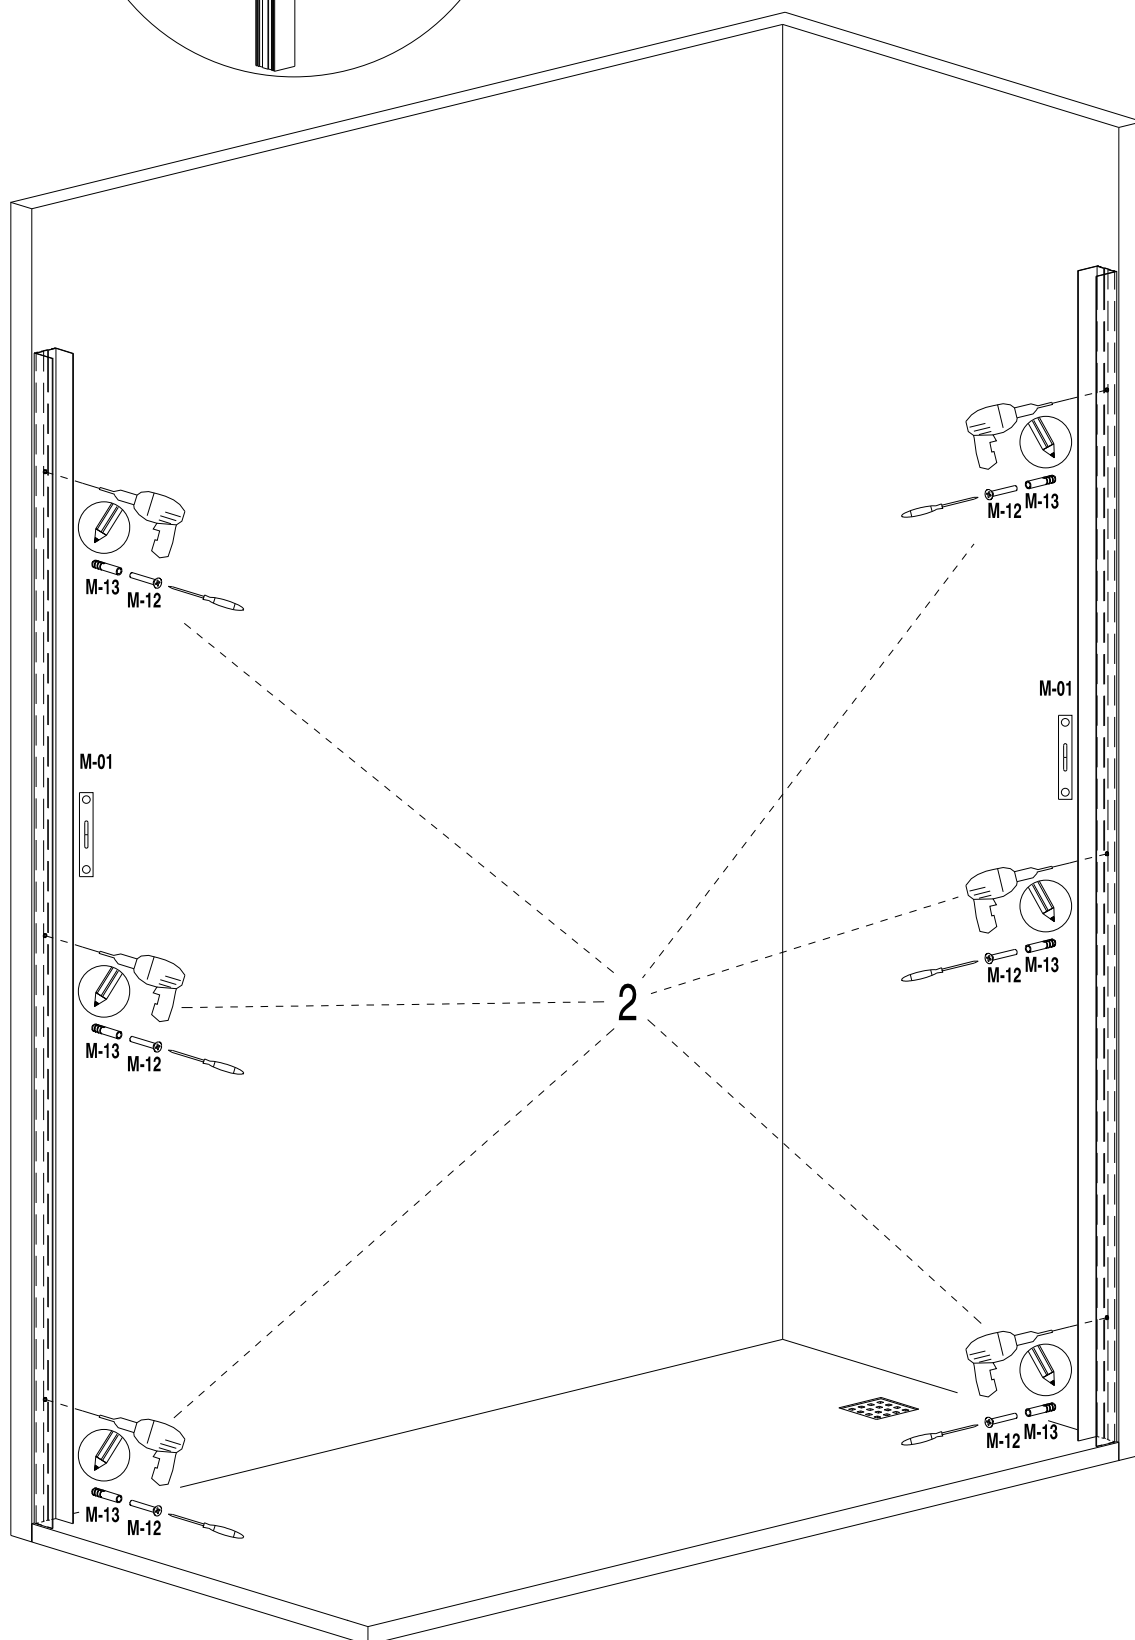
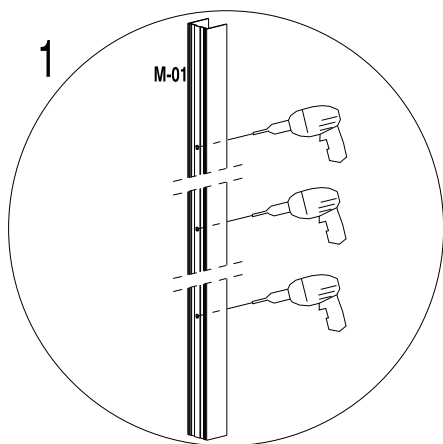


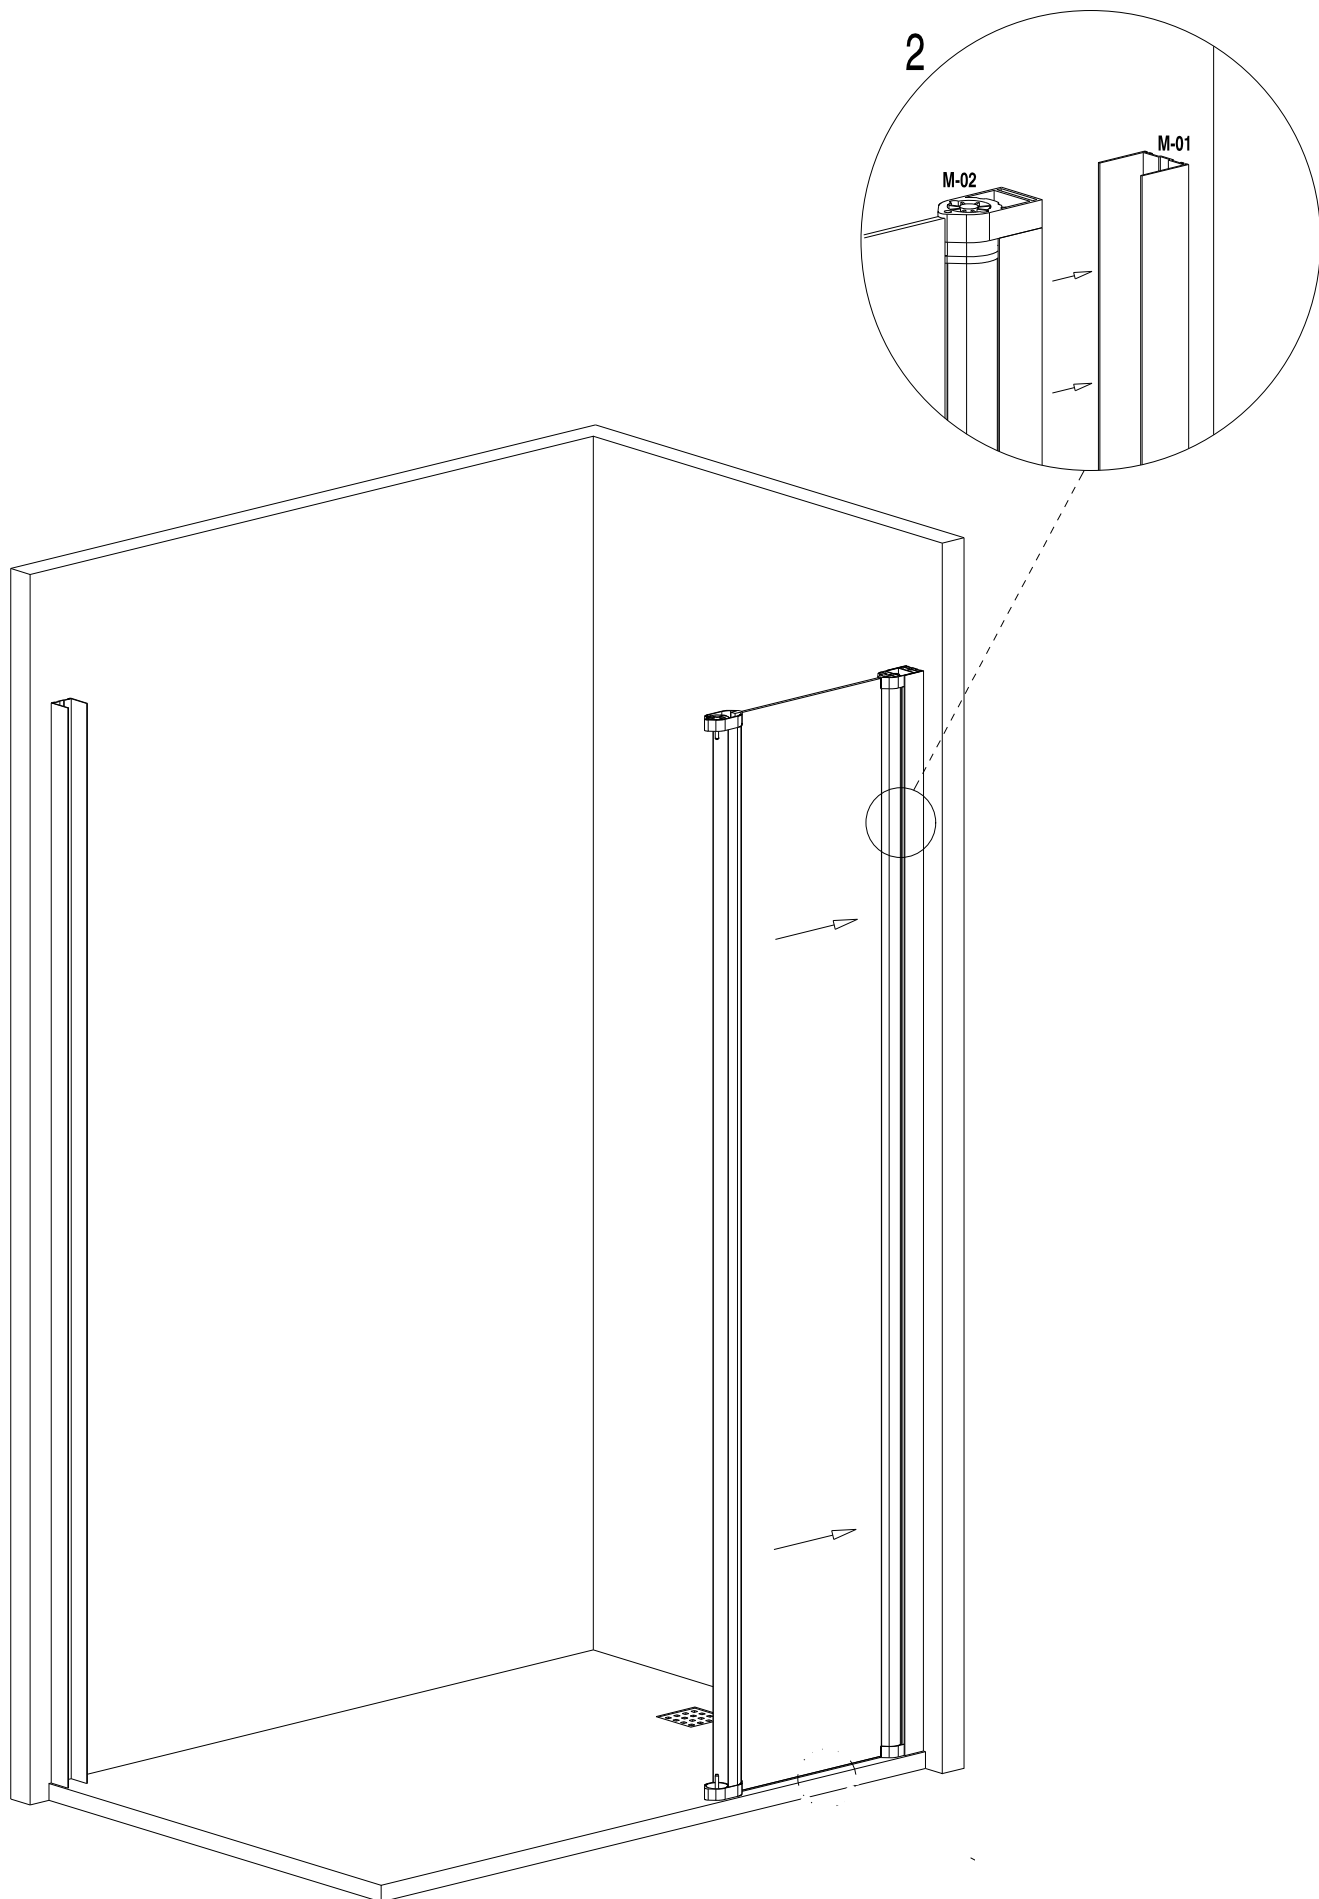


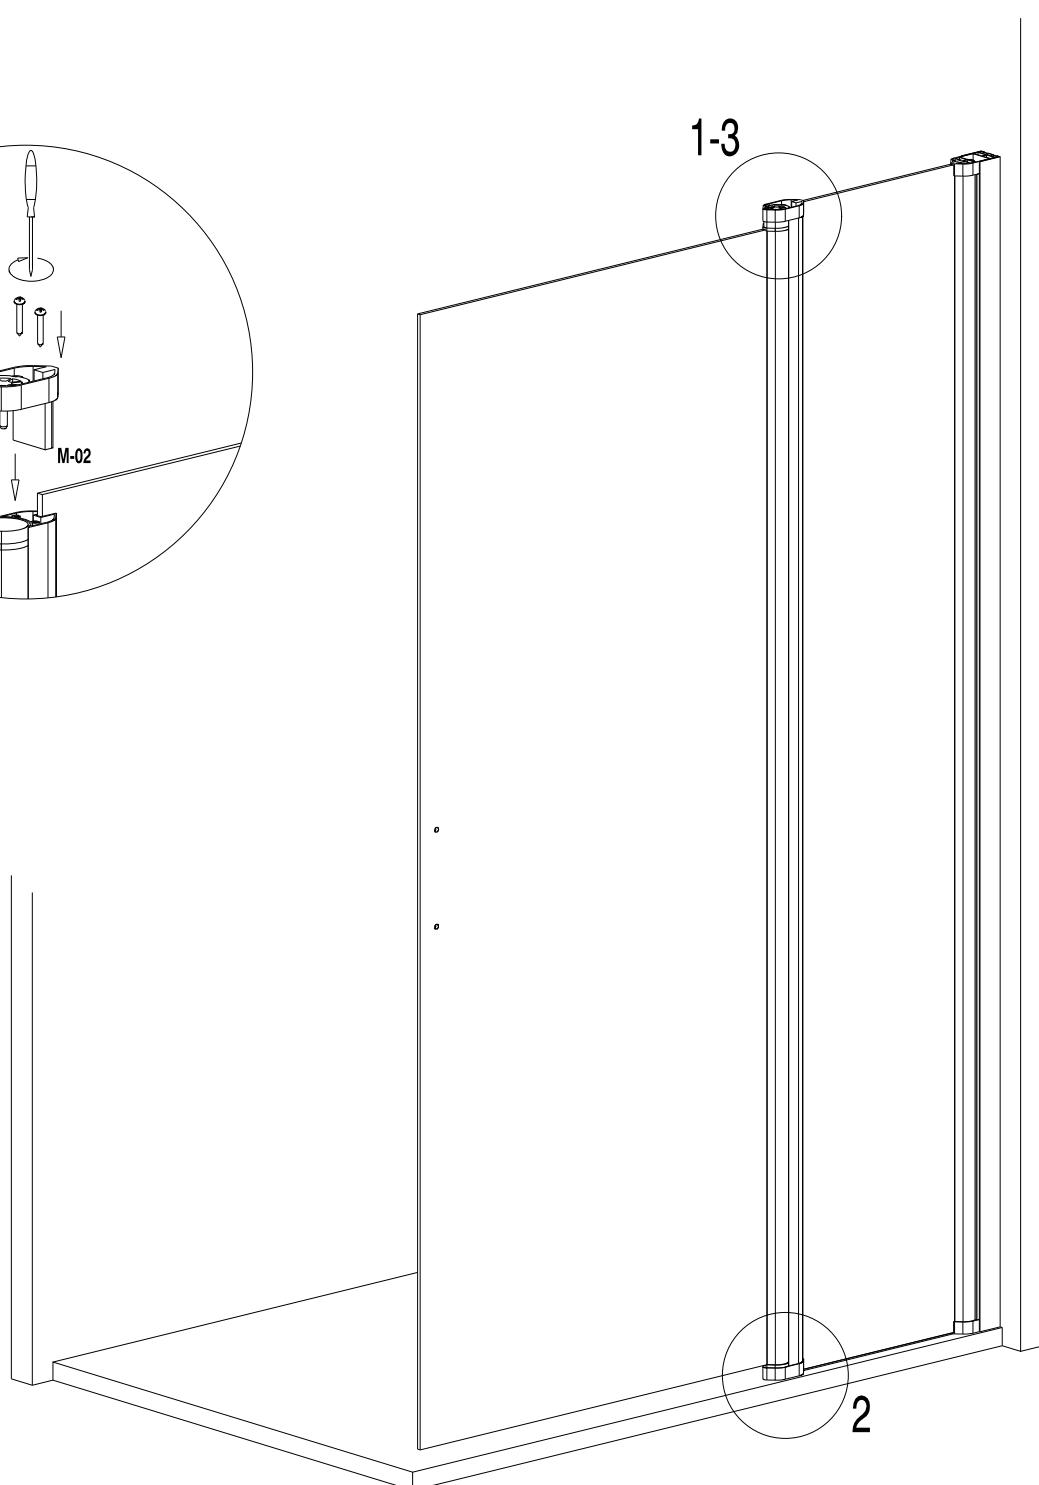
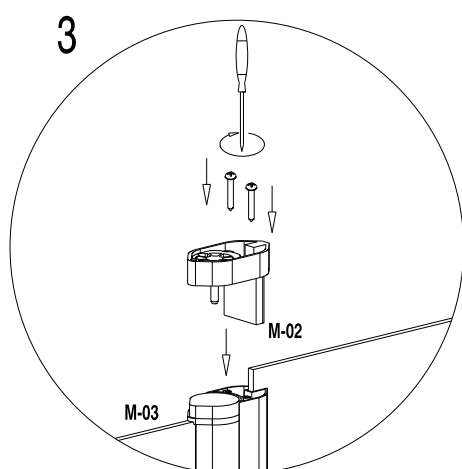
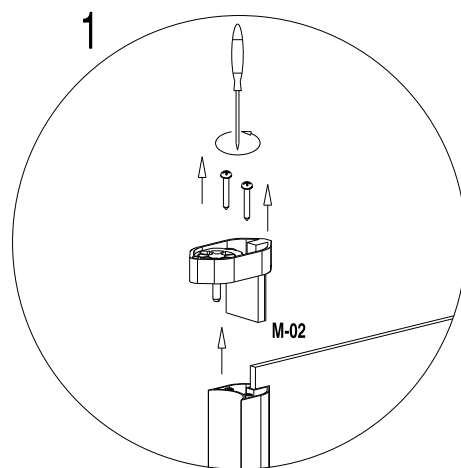
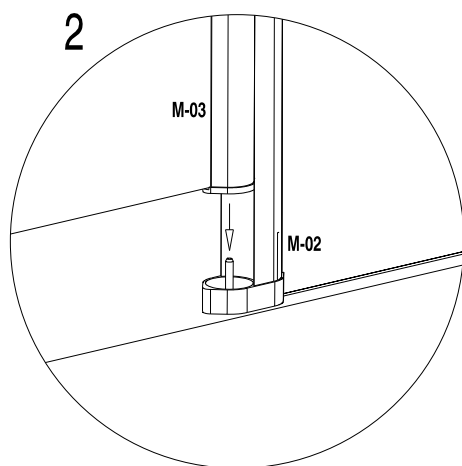


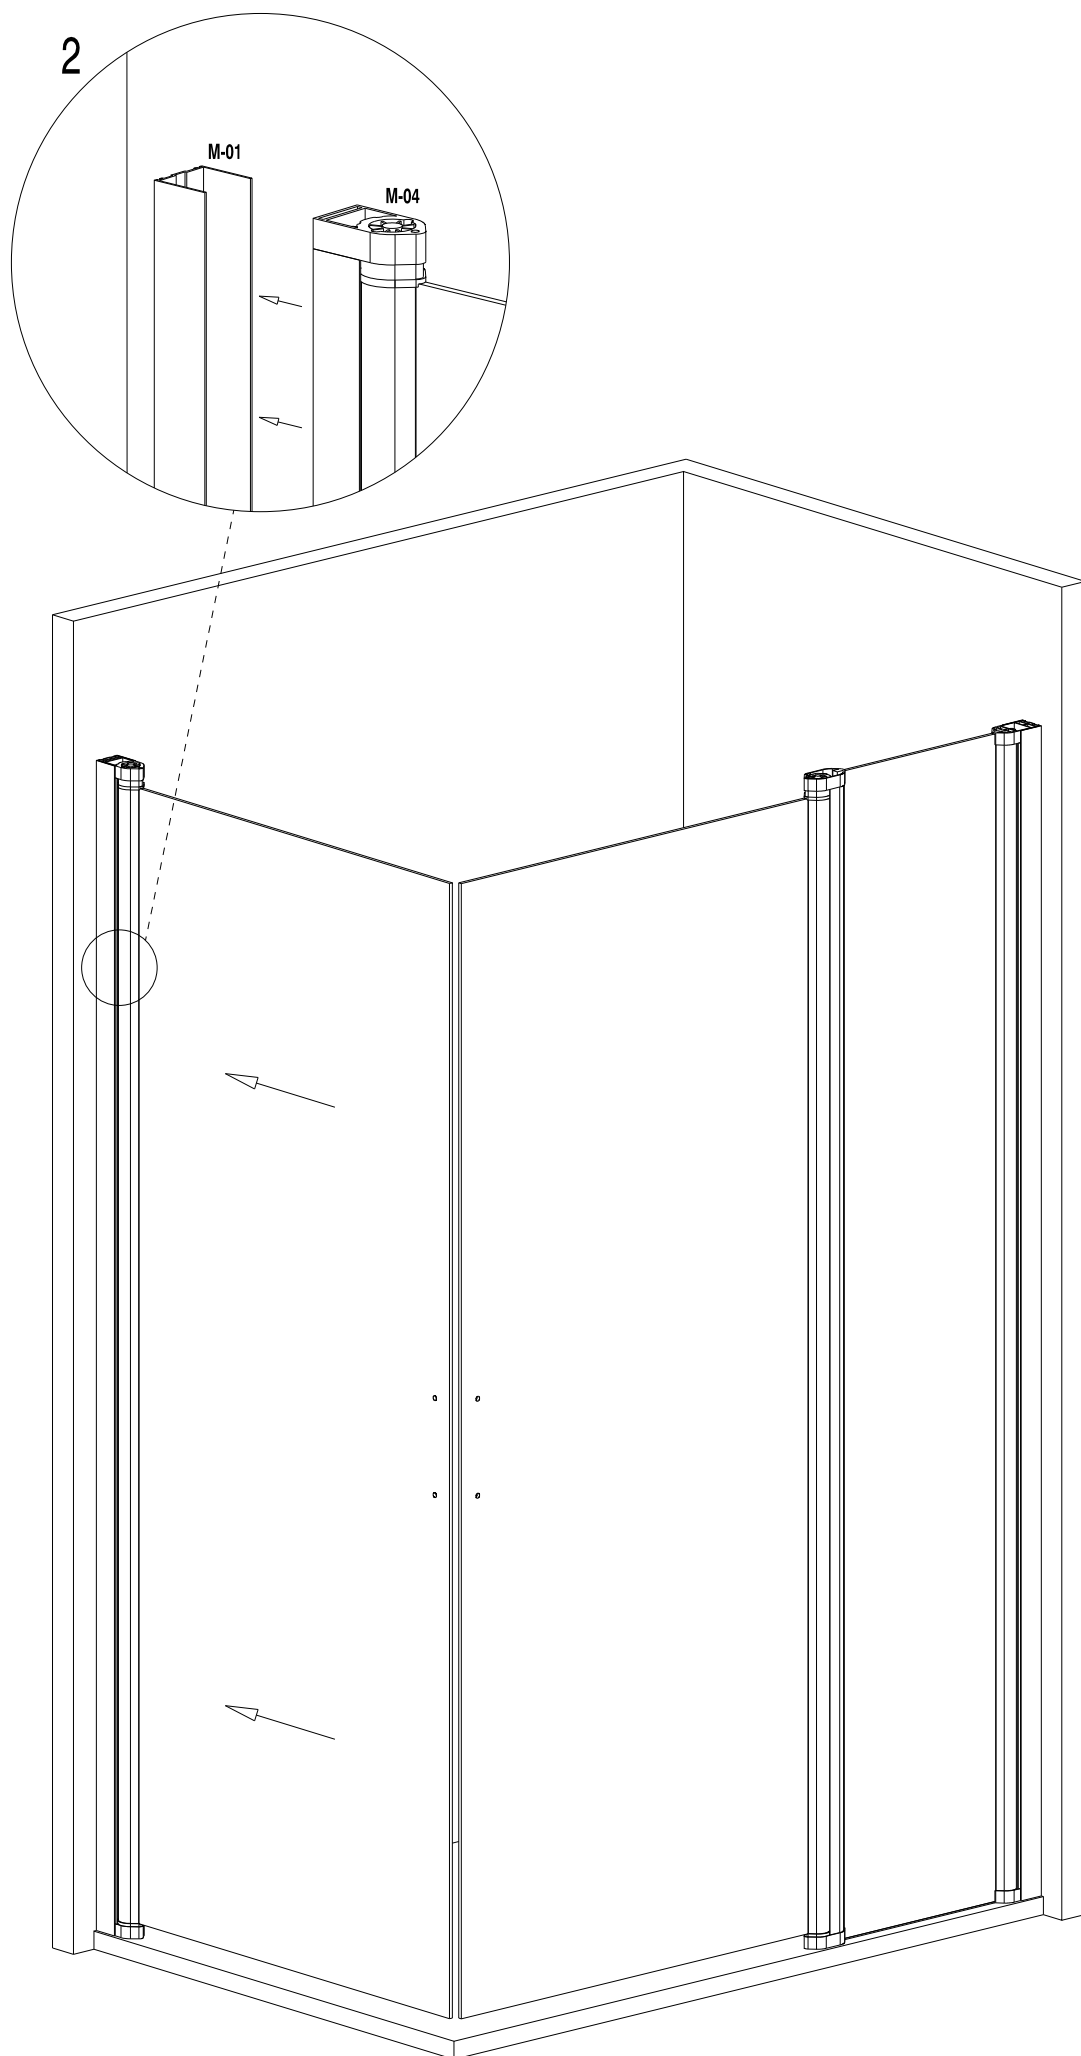

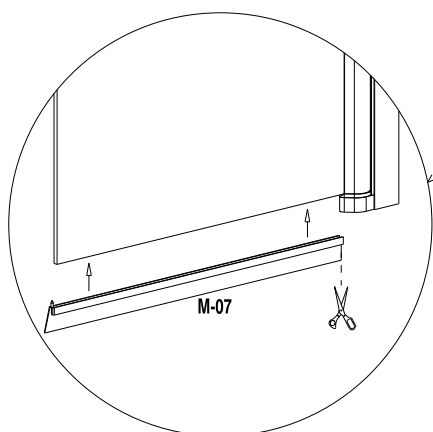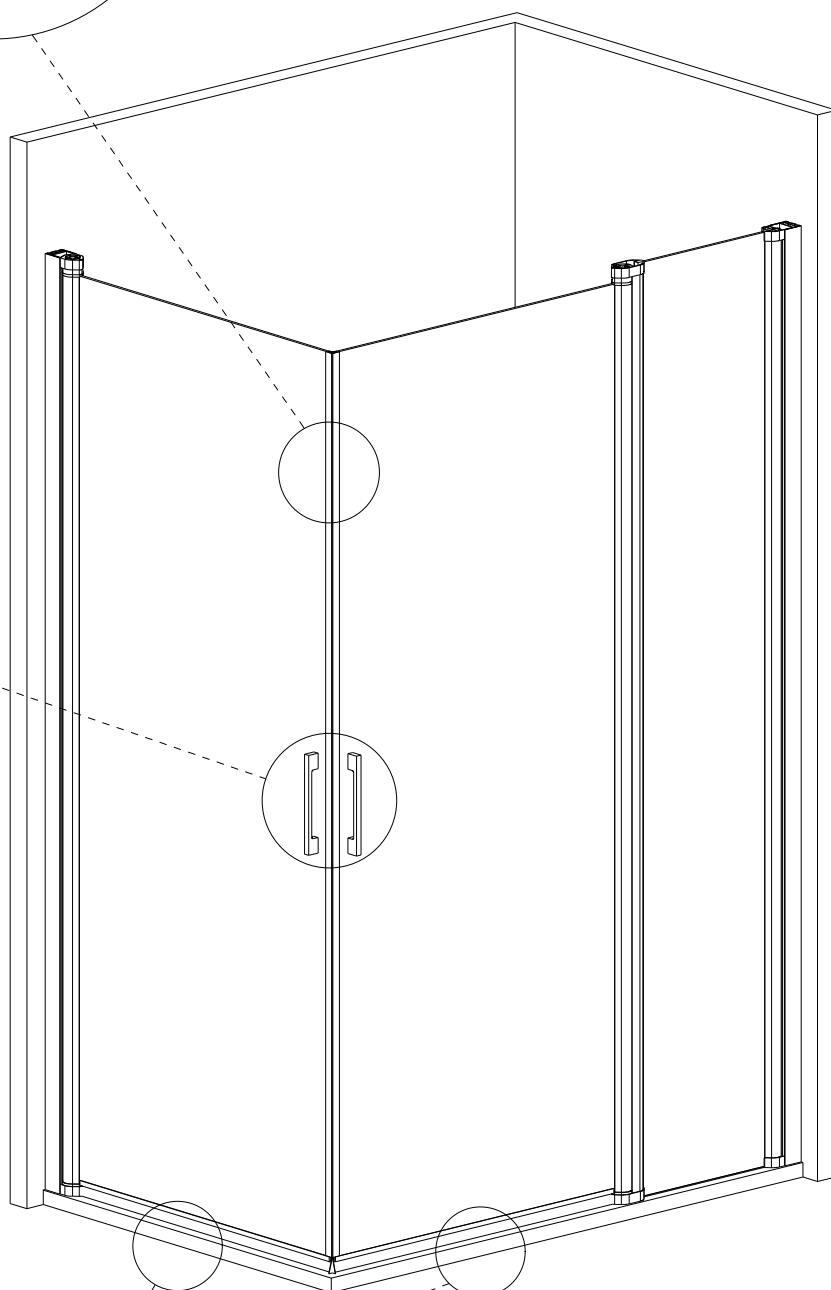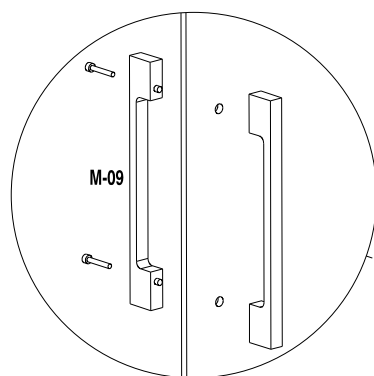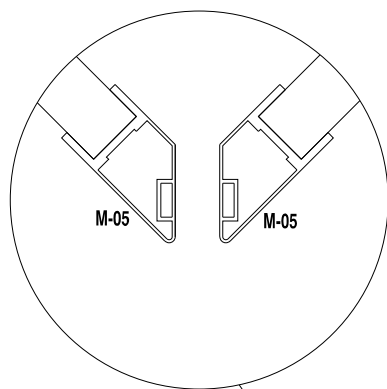

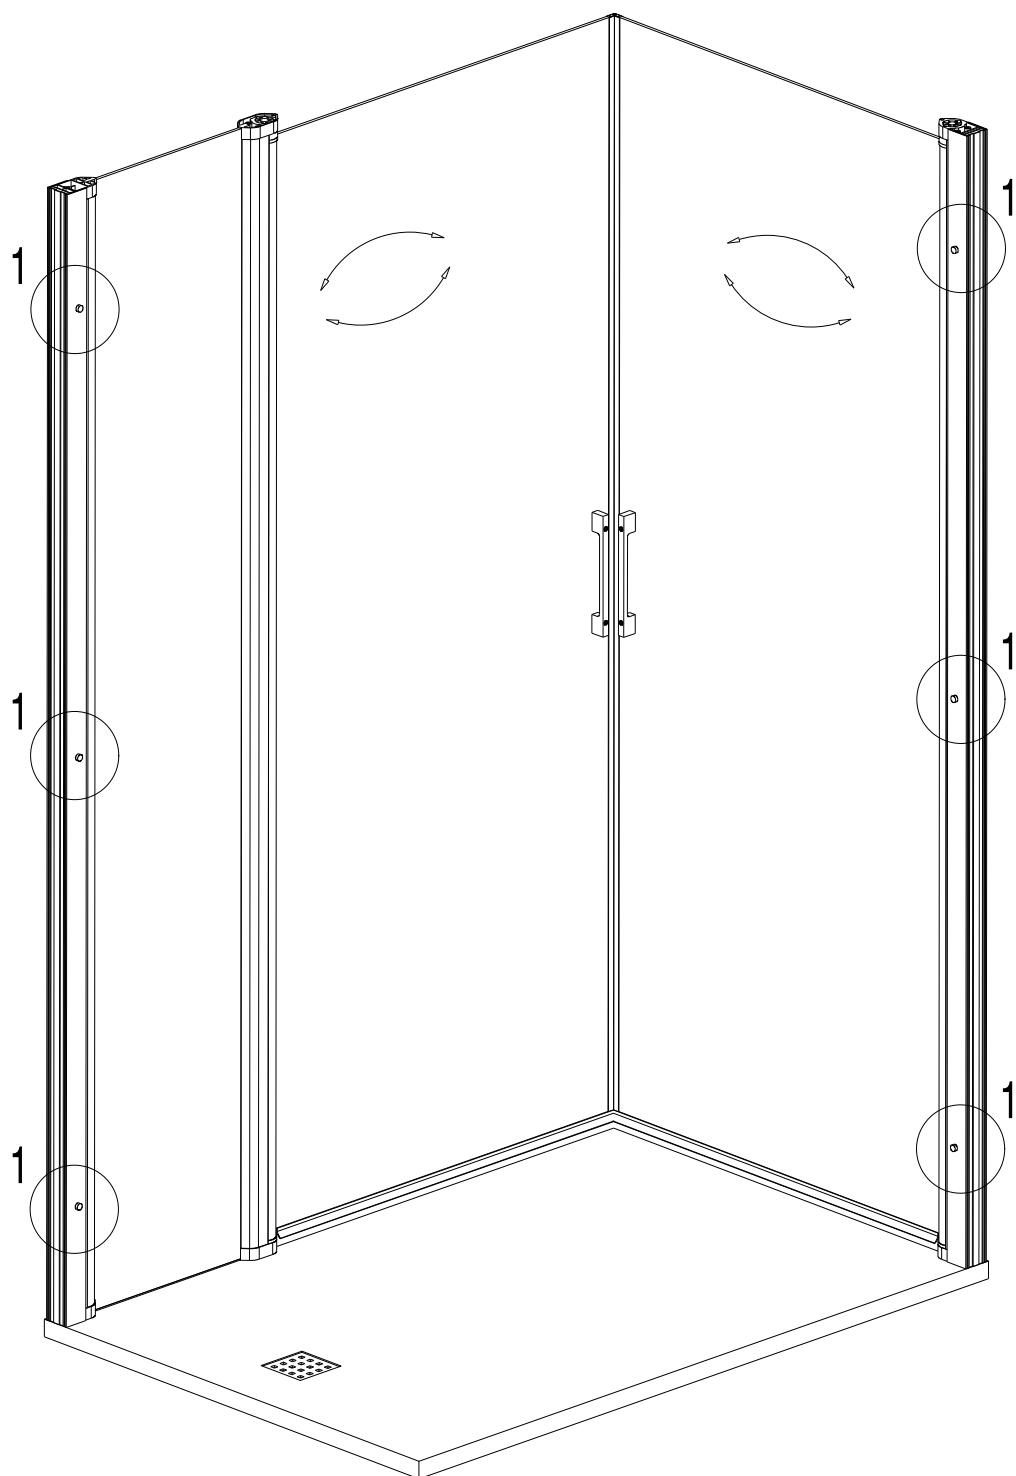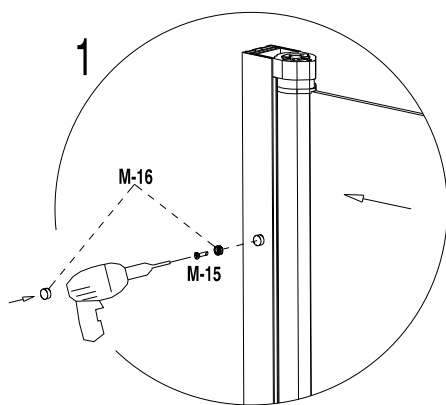

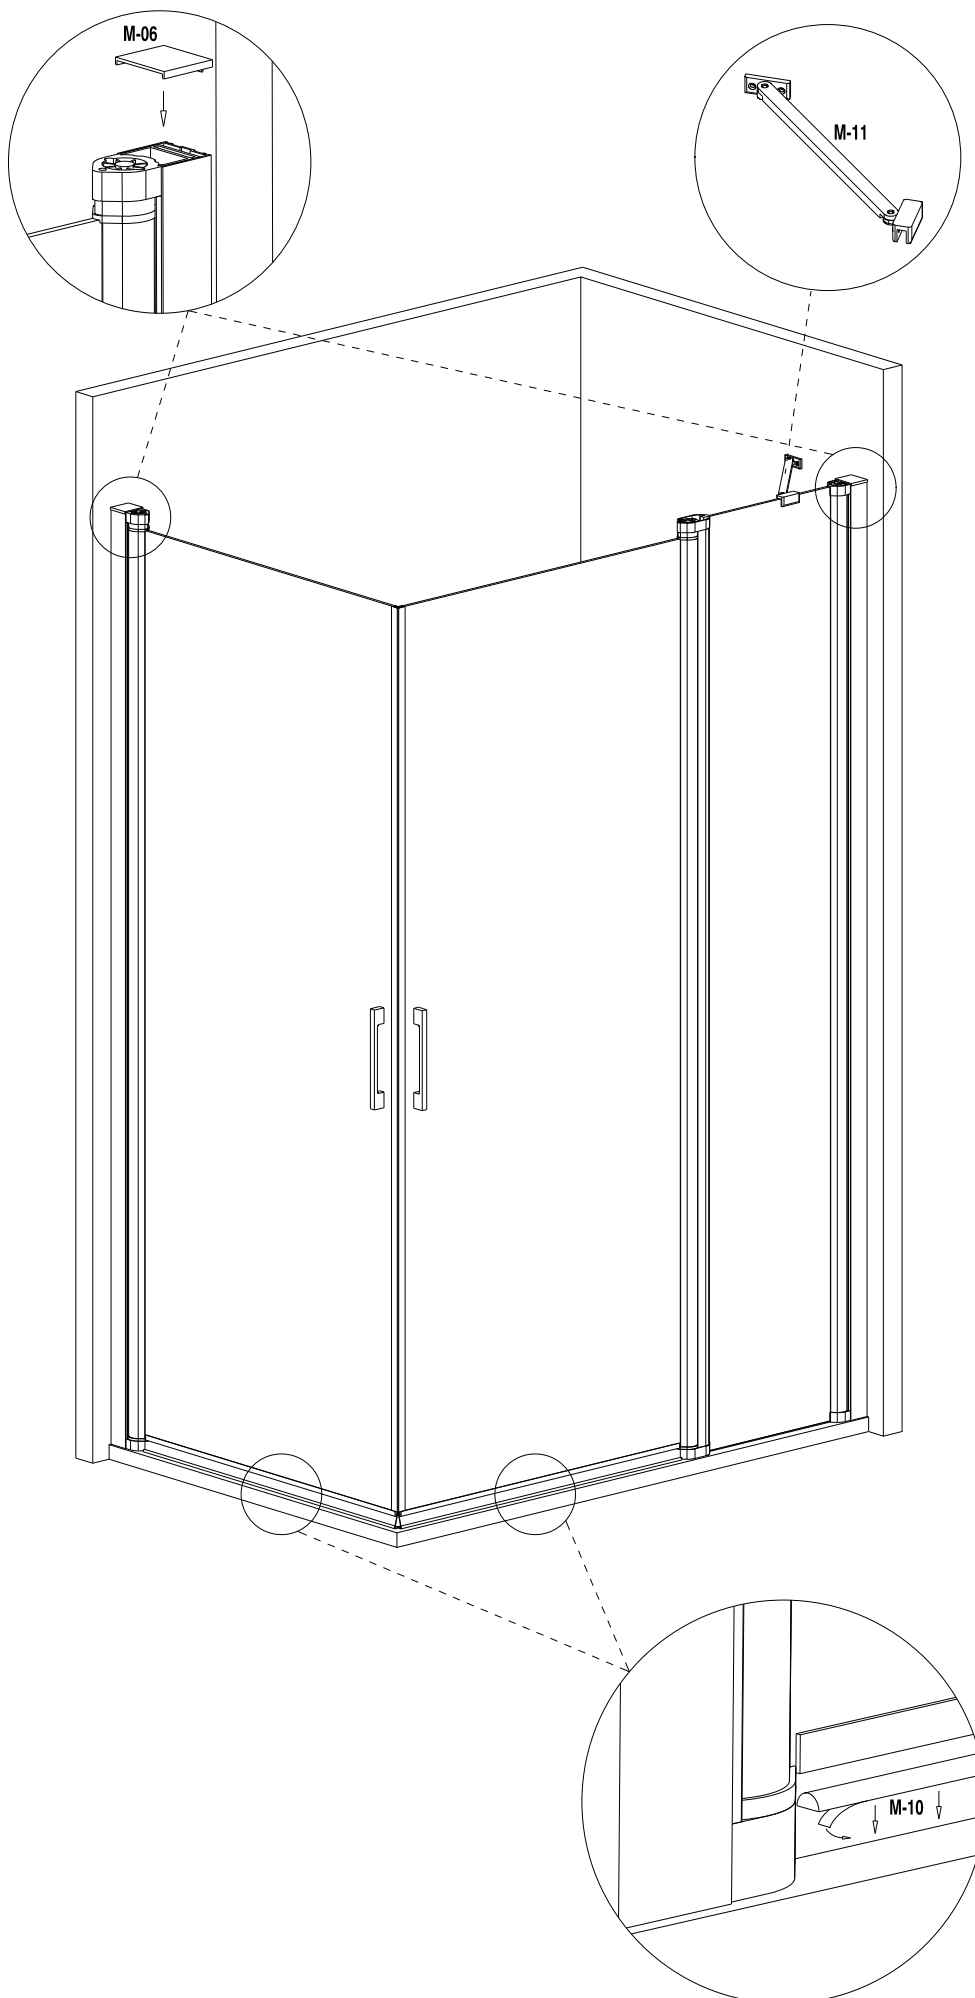

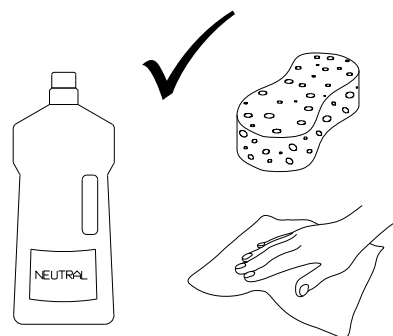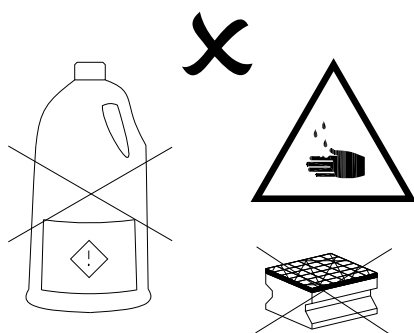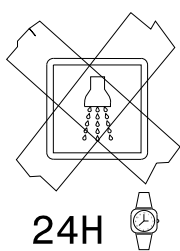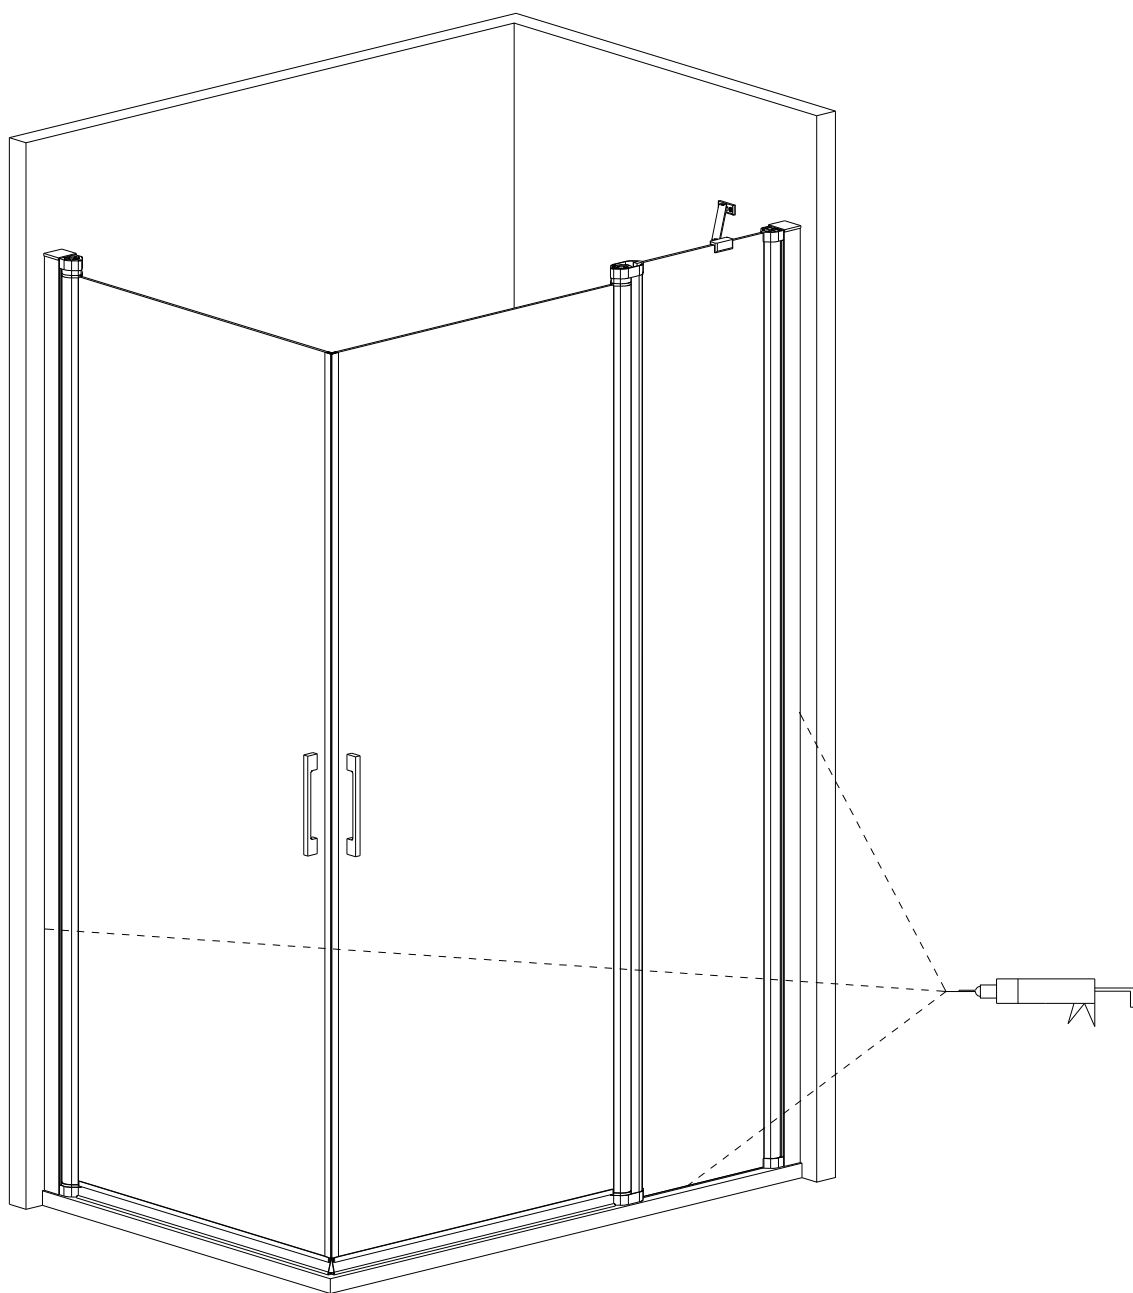



EUROPEAN SYSTEMS SERVICES
contact@expertbath.com



13

UNE-EN 14428

